
ASSA ABLOY Anti-ligature Lever handle



Anti-ligature fittings for different types of institutional environments

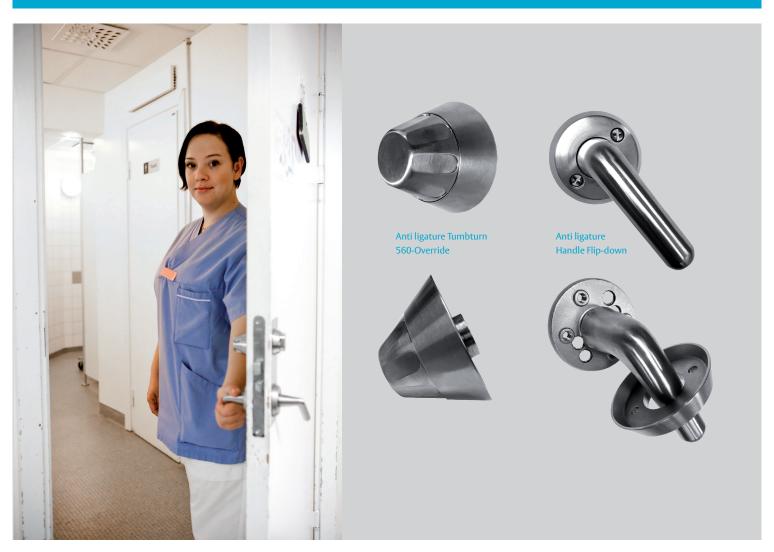

ASSA ABLOY's health care accessories are designed to meet the need for personal integrity and individual security for patients staying in different types of institutional environments, for example in mental health care.

Application

Anti ligature Clutch tumbturn 560-Override

- Designed for use on individual bedrooms or bathrooms within mental health secure accommodation, young offenders units, etc. Permit clients to lock the door for privacy, while allowing authorised staff to gain entry. Avoids the problem with conventional thumbturns where clients can prevent the door being unlocked by gripping the internal turn
- The thumbturn have a rounded shape to make it difficult for ropes, wires or cotton bandage to get attached

Specifications

- Clutch thumbturn
- Brushed stainless steel AISI 316L // EN 1.4404
- Suitable for lockcases with 90 $^{\circ}$ key rotation like: 565- and 310-50 / 70
- Combined with oval DC cylinder (xx03) on the outside of the door
- Tested according to DHFTS 001: 2013

- The thumbturn disengages when attempting to hold from the inside
- Rounded design to minimise risk of injury and prevent the attachment of ligatures
- May be used to operate the lock normally. However, if the thumbturn is gripped to prevent the door being unlocked, the internal sprung clutch mechanism will release allowing a key to turn in the cylinder and operate the lock.

Anti ligature Handle Flip-down

- The handle have a conical shape to make it difficult for ropes, wires or cotton bandage to get attached
- When loaded, the handle is folded down, which makes it difficult to expose yourself to injury
- In combination with ASSA ABLOY lockcase 565, staff can always get in using the key

Specifications

- Brushed stainless steel AISI 316L // EN 1.4404
- Multi fixings SCA/DIN/EUR c/c 30 or 38 mm
- Rose mounted with bolt through fastening and the cover with one-way screws
- Available as a pair or half set and can be combined with ASSA ABLOY's other lever handles.

reserve the right to correct any printing errors and update the information after printing


ASSA ABLOY Anti-ligature ASSA ABLO Opening Solutions Lever handle and clutch thumbturn


Anti-ligature fittings for different types of institutional environments










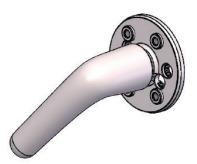



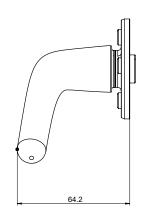

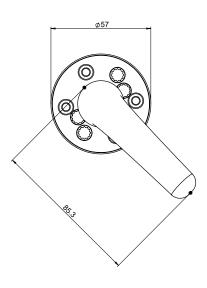

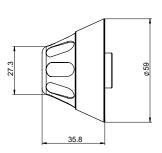

Other accessories

- These products are preferred to be used together with ASSA ABLOY lockcase 565 or 310
- When integrating with access systems, it is recommended lock housing 560, 562 or 1560

Item number

 Anti ligature Tumbturn 560-Override 	706758 160 031
Anti ligature Handle Flip-down Scan/DIN Pair	706759 160 031
• Anti ligature Handle Flip-down Scan/DIN ½-set	706760 160 031
Anti ligature 96265 Clutch toilet thumbturn	706875 100 013

ASSA ABLOY Opening Solutions Sweden P.O. Box 371 SE-631 05 Eskilstuna Sweden

Phone +46 (0)16 17 70 00 Fax +46 (0)16 17 70 49

Customer support:
Phone intl. +46 (0)16 17 71 00
Phone nat. 0771-640 640
Fax +46 (0)16 17 73 72
e-mail: helpdesk.se.openingsolutions@assaabloy.com
www.assaabloyopeningsolutions.se